



# PQM

## Power Quality Meter™


### INSTRUCTION MANUAL

Software Revision: 3.6x

Manual P/N: 1665-0003-CH

Manual Order Code: GEK-106296B

Copyright © 2002 GE Power Management

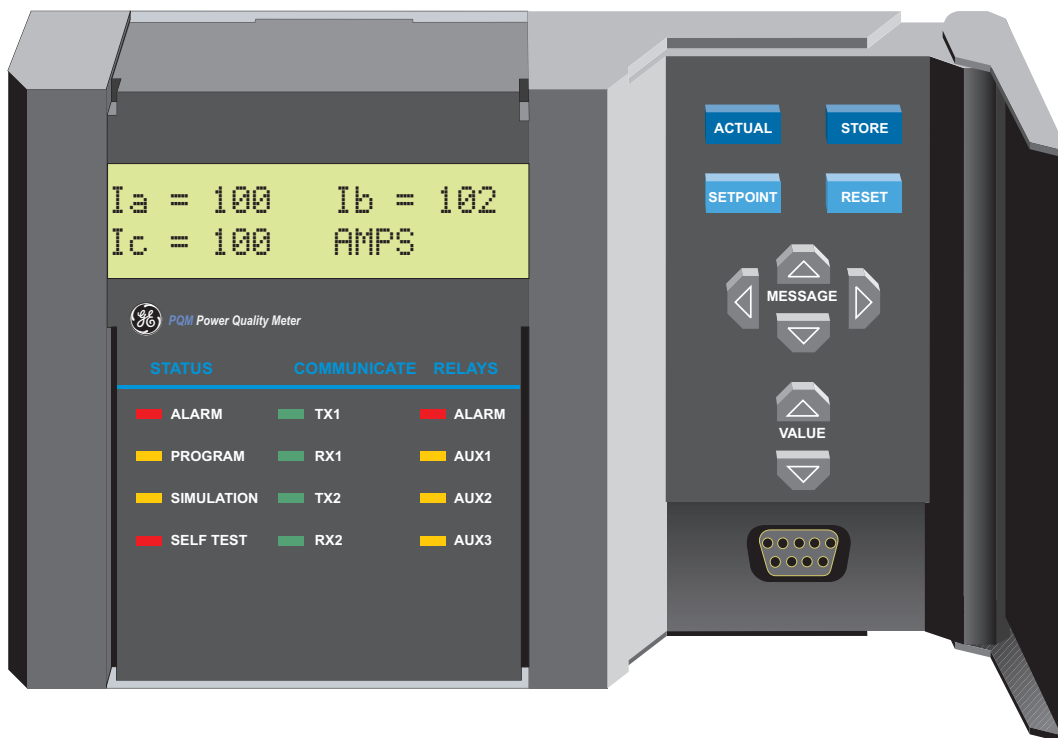

823787A4.CDR

#### GE Power Management

215 Anderson Avenue, Markham, Ontario

Canada L6E 1B3

Tel: (905) 294-6222 Fax: (905) 294-8512

Internet: <http://www.GEindustrial.com/pm>



Manufactured under an  
ISO9001 Registered system.



*These instructions do not purport to cover all details or variations in equipment nor provide for every possible contingency to be met in connection with installation, operation, or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purpose, the matter should be referred to the General Electric Company.*

*To the extent required the products described herein meet applicable ANSI, IEEE, and NEMA standards; but no such assurance is given with respect to local codes and ordinances because they vary greatly.*



# TABLE OF CONTENTS

## 1. OVERVIEW

### 1.1 INTRODUCTION

1.1.1 DESCRIPTION .....	1-1
1.1.2 FEATURE HIGHLIGHTS .....	1-1
1.1.3 APPLICATIONS .....	1-3

### 1.2 STANDARD FEATURES

1.2.1 METERING .....	1-4
1.2.2 FUTURE EXPANSION .....	1-4
1.2.3 OPTIONAL FEATURES .....	1-5
1.2.4 PQMPC SOFTWARE .....	1-9
1.2.5 ORDER CODES .....	1-10

### 1.3 SPECIFICATIONS

1.3.1 PQM SPECIFICATIONS .....	1-11
--------------------------------	------

## 2. INSTALLATION

### 2.1 PHYSICAL

2.1.1 MOUNTING .....	2-1
2.1.2 PRODUCT IDENTIFICATION .....	2-2
2.1.3 REVISION HISTORY .....	2-3

### 2.2 ELECTRICAL

2.2.1 EXTERNAL CONNECTIONS .....	2-4
2.2.2 CONTROL POWER .....	2-13
2.2.3 VT INPUTS .....	2-13
2.2.4 CT INPUTS .....	2-13
2.2.5 OUTPUT RELAYS .....	2-14
2.2.6 SWITCH INPUTS (OPTIONAL) .....	2-15
2.2.7 ANALOG OUTPUTS (OPTIONAL) .....	2-17
2.2.8 ANALOG INPUT (OPTIONAL) .....	2-17
2.2.9 RS485 SERIAL PORTS .....	2-18
2.2.10 RS232 FRONT PANEL PORT .....	2-20
2.2.11 DIELECTRIC STRENGTH TESTING .....	2-21

## 3. OPERATION

### 3.1 FRONT PANEL & DISPLAY

3.1.1 FRONT PANEL .....	3-1
3.1.2 DISPLAY .....	3-1

### 3.2 STATUS INDICATORS

3.2.1 DESCRIPTION .....	3-2
3.2.2 STATUS .....	3-2
3.2.3 COMMUNICATE .....	3-2
3.2.4 RELAYS .....	3-3

### 3.3 KEYPAD

3.3.1 DESCRIPTION .....	3-4
3.3.2 SETPOINT KEY .....	3-4
3.3.3 ACTUAL KEY .....	3-4
3.3.4 STORE KEY .....	3-4
3.3.5 RESET KEY .....	3-5
3.3.6 MESSAGE KEYS .....	3-6
3.3.7 VALUE KEYS .....	3-6
3.3.8 DATA ENTRY METHODS .....	3-7
3.3.9 SETPOINT ACCESS SECURITY .....	3-7

## TABLE OF CONTENTS

### 3.4 DEFAULT MESSAGES

3.4.1 DESCRIPTION .....	3-8
3.4.2 ADDING A DEFAULT MESSAGE .....	3-8
3.4.3 DELETING A DEFAULT MESSAGE .....	3-8

## 4. PROGRAMMING

### 4.1 INTRODUCTION

4.1.1 SETPOINT ENTRY METHODS.....	4-1
-----------------------------------	-----

### 4.2 S1 PQM SETUP

4.2.1 DESCRIPTION .....	4-3
4.2.2 PREFERENCES .....	4-3
4.2.3 SETPOINT ACCESS .....	4-4
4.2.4 RS485/RS232 SERIAL PORTS.....	4-6
4.2.5 DNP 3.0 CONFIGURATION .....	4-7
4.2.6 CLOCK.....	4-8
4.2.7 CALCULATION PARAMETERS .....	4-9
4.2.8 CLEAR DATA .....	4-11
4.2.9 EVENT RECORDER .....	4-13
4.2.10 TRACE MEMORY.....	4-14
4.2.11 PROGRAMMABLE MESSAGE .....	4-17
4.2.12 PRODUCT OPTIONS .....	4-18

### 4.3 S2 SYSTEM SETUP

4.3.1 CURRENT/VOLTAGE CONFIGURATION .....	4-19
4.3.2 ANALOG OUTPUTS .....	4-21
4.3.3 ANALOG INPUT .....	4-25
4.3.4 SWITCH INPUTS.....	4-27
4.3.5 PULSE OUTPUT .....	4-29
4.3.6 PULSE INPUT .....	4-31
4.3.7 DATA LOGGER .....	4-33

### 4.4 S3 OUTPUT RELAYS

4.4.1 DESCRIPTION .....	4-34
4.4.2 ALARM RELAY .....	4-35
4.4.3 AUXILIARY RELAYS .....	4-35

### 4.5 S4 ALARMS/CONTROL

4.5.1 CURRENT/VOLTAGE ALARMS.....	4-36
4.5.2 TOTAL HARMONIC DISTORTION.....	4-41
4.5.3 FREQUENCY .....	4-42
4.5.4 POWER ALARMS.....	4-43
4.5.5 POWER FACTOR.....	4-45
4.5.6 DEMAND ALARMS.....	4-48
4.5.7 PULSE INPUT .....	4-50
4.5.8 TIME .....	4-52
4.5.9 MISCELLANEOUS ALARMS.....	4-53

### 4.6 S5 TESTING

4.6.1 TEST OUTPUT RELAYS & LEDS .....	4-54
4.6.2 CURRENT/VOLTAGE SIMULATION .....	4-55
4.6.3 ANALOG OUTPUTS SIMULATION.....	4-56
4.6.4 ANALOG INPUT SIMULATION .....	4-57
4.6.5 SWITCH INPUTS SIMULATION.....	4-58
4.6.6 FACTORY USE ONLY .....	4-58

## TABLE OF CONTENTS

<b>5. MONITORING</b>	
<b>5.1 ACTUAL VALUES VIEWING</b>	
5.1.1 DESCRIPTION .....	5-1
<b>5.2 A1 METERING</b>	
5.2.1 CURRENT .....	5-2
5.2.2 VOLTAGE .....	5-4
5.2.3 PHASORS .....	5-6
5.2.4 POWER .....	5-7
5.2.5 ENERGY .....	5-12
5.2.6 DEMAND .....	5-14
5.2.7 FREQUENCY .....	5-16
5.2.8 PULSE COUNTER .....	5-17
5.2.9 ANALOG INPUT .....	5-19
<b>5.3 A2 STATUS</b>	
5.3.1 ALARMS .....	5-20
5.3.2 SWITCH STATUS.....	5-22
5.3.3 CLOCK.....	5-23
5.3.4 PROGRAMMABLE MESSAGE .....	5-23
<b>5.4 A3 POWER ANALYSIS</b>	
5.4.1 POWER QUALITY .....	5-24
5.4.2 TOTAL HARMONIC DISTORTION.....	5-25
5.4.3 DATA LOGGER .....	5-26
5.4.4 EVENT RECORDER .....	5-27
<b>5.5 A4 PRODUCT INFO</b>	
5.5.1 SOFTWARE VERSIONS & MODEL INFORMATION.....	5-31
<b>6. SOFTWARE</b>	
<b>6.1 INTRODUCTION</b>	
6.1.1 OVERVIEW.....	6-1
6.1.2 HARDWARE CONFIGURATION.....	6-1
<b>6.2 PQMPC INSTALLATION</b>	
6.2.1 CHECKING IF INSTALLATION/UPGRADE IS REQUIRED .....	6-3
6.2.2 INSTALLING/UPGRADING PQMPC .....	6-4
6.2.3 CONFIGURING PQMPC COMMUNICATIONS.....	6-5
<b>6.3 PQMPC MENUS</b>	
6.3.1 DESCRIPTION .....	6-6
<b>6.4 UPGRADING FIRMWARE</b>	
6.4.1 DESCRIPTION .....	6-7
6.4.2 SAVE/PRINT PQM SETPOINTS TO A FILE .....	6-7
6.4.3 LOADING NEW FIRMWARE INTO THE PQM.....	6-8
6.4.4 LOADING SAVED SETPOINTS INTO THE PQM .....	6-10
<b>6.5 USING PQMPC</b>	
6.5.1 ENTERING SETPOINTS .....	6-11
6.5.2 VIEWING ACTUAL VALUES .....	6-12
6.5.3 SETPOINT FILES .....	6-12
6.5.4 GETTING HELP .....	6-12
<b>6.6 POWER ANALYSIS</b>	
6.6.1 WAVEFORM CAPTURE.....	6-13
6.6.2 HARMONIC ANALYSIS.....	6-13
6.6.3 TRACE MEMORY.....	6-16
6.6.4 DATA LOGGER .....	6-18

## TABLE OF CONTENTS

### 7. MODBUS COMMUNICATIONS

#### 7.1 OVERVIEW

7.1.1	MODBUS PROTOCOL .....	7-1
7.1.2	ELECTRICAL INTERFACE .....	7-1
7.1.3	DATA FORMAT & DATA RATE .....	7-1
7.1.4	DATA PACKET FORMAT .....	7-2
7.1.5	ERROR CHECKING .....	7-2
7.1.6	CRC-16 ALGORITHM .....	7-3
7.1.7	TIMING .....	7-3

#### 7.2 MODBUS FUNCTIONS

7.2.1	PQM SUPPORTED MODBUS FUNCTIONS .....	7-4
7.2.2	FUNCTION CODES 03/04 – READ SETPOINTS/ACTUAL VALUES .....	7-4
7.2.3	FUNCTION CODE 05 - EXECUTE OPERATION .....	7-5
7.2.4	FUNCTION CODE 05 – BROADCAST COMMAND .....	7-6
7.2.5	FUNCTION CODE 06 – STORE SINGLE SETPOINT .....	7-7
7.2.6	FUNCTION CODE 07 – READ DEVICE STATUS .....	7-8
7.2.7	FUNCTION CODE 08 – LOOPBACK TEST .....	7-9
7.2.8	FUNCTION CODE 16 – STORE MULTIPLE SETPOINTS .....	7-10
7.2.9	FUNCTION CODE 16 - PERFORMING COMMANDS .....	7-11
7.2.10	FUNCTION CODE 16 - BROADCAST COMMAND .....	7-12
7.2.11	ERROR RESPONSES .....	7-13

#### 7.3 MODBUS MEMORY MAP

7.3.1	MEMORY MAP INFORMATION .....	7-14
7.3.2	USER-DEFINABLE MEMORY MAP .....	7-14
7.3.3	PQM MEMORY MAP .....	7-15
7.3.4	MEMORY MAP DATA FORMATS .....	7-55
7.3.5	ANALOG OUTPUT PARAMETER RANGE .....	7-63

### 8. DNP COMMUNICATIONS

#### 8.1 DNP 3.0 PROTOCOL

8.1.1	DEVICE PROFILE DOCUMENT .....	8-1
8.1.2	IMPLEMENTATION TABLE .....	8-3
8.1.3	DEFAULT VARIATIONS .....	8-4
8.1.4	INTERNAL INDICATION BITS .....	8-4
8.1.5	BINARY INPUT / BINARY INPUT CHANGE POINT LIST .....	8-5
8.1.6	BINARY OUTPUT / CONTROL RELAY OUTPUT POINT LIST .....	8-7
8.1.7	POINT LIST FOR ANALOG INPUT/OUTPUT CHANGE .....	8-9
8.1.8	POINT LIST FOR COUNTERS .....	8-14

### 9. COMMISSIONING

#### 9.1 COMMISSIONING

### A. APPLICATION NOTES

#### A.1 PQM APPLICATION NOTES

A.1.1	EVENT RECORDER .....	A-1
A.1.2	INTERFACING USING HYPERTERMINAL .....	A-4
A.1.3	PHASORS IMPLEMENTATION .....	A-7
A.1.4	TRIGGERED TRACE MEMORY RESOLUTION .....	A-9
A.1.5	PULSE OUTPUT APPLICATION .....	A-11
A.1.6	DATA LOGGER IMPLEMENTATION .....	A-12
A.1.7	READING LONG INTEGERS FROM MEMORY MAP .....	A-16
A.1.8	PULSE INPUT APPLICATION .....	A-18
A.1.9	PULSE TOTALIZER APPLICATION .....	A-19

## TABLE OF CONTENTS

---

### B. TABLES AND FIGURES

#### B.1 TABLES AND FIGURES

B.1.1	LIST OF TABLES.....	B-1
B.1.2	LIST OF FIGURES .....	B-1

---

### C. WARRANTY

#### C.1 PQM WARRANTY

## TABLE OF CONTENTS