



## D20 NON-VME Ordering Guide

Rev. 06 updated 23 May 2008

Ordering Code: D20NON-VME -

D20NON-VME - \_ \_ \_ \_ - \_ \_ \_ \_ - \_ \_ \_ \_

	1	2	3	4	5	6	7	8	9	10	11	
	A											<b>D20 NON-VME CHASSIS</b>
												(A) - D20 Non-VME Chassis
												<b>DATA DISPLAY PANEL</b>
		U										(U) - Not required
			A									(A) - WESDAC DATA DISPLAY PANEL, 12IN CABLE
												<b>D20 NON-VME PROCESSOR</b>
												(U) - Not required <b>(Note 1)</b>
				U								(A) - D20ME, Non-VME, RS232
					B							(B) - D20ME II, Non-VME, RS232/RS485
												<b>D20 POWER SUPPLY</b>
												(U) - Not required
												(A) - D20 Power Supply, 20-60VDC Input, 24V ISO Output
												(B) - D20 Power Supply, 20-60VDC Input, 48V ISO Output
												(C) - D20 Power Supply, 100-300VDC/85-264VAC Input, 24V ISO Output
												(D) - D20 Power Supply, 100-300VDC/85-264VAC Input, 48V ISO Output
												<b>MODEM SLOT 1 - 3</b>
												(U) - Empty Slot with Cover Plate
												(A) - WESDAC D20 202 BIN MODEM
												(C) - TELENETICS 14400 BAUD MODEM 2-WIRE DIAL UP
												(D) - TELENETICS 14400 BAUD MODEM 4-WIRE LEASED LINE
												<b>D20 TERMINATOR OPTIONS</b>
												(U) - D20 TERMINATOR NOT REQUIRED
												(1) - D20 TERMINATOR (ONE REQUIRED PER D.20 LINK)
												<b>BOOTROM</b>
												(U) - BOOTROM IS NOT REQUIRED
												(N) - FACTORY SELECTED BOOTROM
												(A) - P130-0 VER.129, D20ME D20 Base BOOTROM
												(B) - P130-0 VER.204, D20ME CCU BOOTROM
												(C) - P130-0 VER.134, D20ME CCU BOOTROM
												(D) - P130-0 VER.133, D20ME CCU BOOTROM
												(E) - P130-0 VER.132, D20ME CCU BOOTROM
												(F) - P130-0 VER.131, D20ME CCU BOOTROM
												(G) - P130-0 VER.130, D20ME CCU BOOTROM
												(H) - P130-0 VER.129, D20ME CCU BOOTROM
												(I) - P130-0 VER.128, D20ME CCU BOOTROM
												(J) - P130-0 VER.127, D20ME CCU BOOTROM
												(K) - P130-0 VER.126, D20ME CCU BOOTROM
												(L) - P130-0 VER.123, D20ME CCU BOOTROM
												(M) - P130-0 VER.205, D20ME CCU BOOTROM
												<b>WESMAINT CABLE</b>
												(U) - Not required
												(A) - WESMAINT Maintenance Cable 8' (DB9/DB9)
												(B) - WESMAINT Maintenance Cable 15' (DB9/DB9)
												<b>D20 A,S,C,K AND KI HARDWARE MANUAL</b>
												(U) - DOCUMENT NOT REQD
												1 (1) - D20/D200 INSTALLATION & OPERATIONS GUIDE HARDCOPY
												2 (2) - D20/D200 PRODUCT DOCUMENTATION CD-ROM

**Note:**

1. If this option is selected, '(U) - BOOTROM IS NOT REQUIRED' has to be ordered from BOOTROM OPTION

GE Energy reserves the right to make any changes to the ordering guide without notice

For the most recent version of the order guide, please visit the GE T&D website at:  
[http://www.gepower.com/prod\\_serv/products/substation\\_automation/en/index.htm](http://www.gepower.com/prod_serv/products/substation_automation/en/index.htm)