

# DNPIO-CO Ordering Guide

Rev. 04 updated 15 May 2008

Ordering Code: DNPIO-CO-	DNPIO-CO- _ _ _ _
<div style="display: flex; justify-content: space-around; width: 100px;"> <span>↑ 1</span> <span>↑ 2</span> <span>↑ 3</span> <span>↑ 4</span> </div>	
<b>CO TERMINATION OPTIONS</b>	
1	(1) - Compression Termination
2	(2) - D25 Termination
3	(3) - Disconnectable Compression Termination
4	(4) - Solid State Relays
<b>Output Configuration</b>	
A	(A) - Trip / Close
B	(B) - Raise / Lower
<b>DUCT PANEL OPTIONS</b>	
U	(U) - DUCT PANEL NOT REQUIRED
1	(1) - CABLE DUCT PANEL, TIE WRAP CONNECTIONS
2	(2) - TWO CABLE DUCT PANELS, TIE WRAP CONNECTIONS
3	(3) - CABLE DUCT PANEL, NO THROUGH HOLES
4	(4) - TWO CABLE DUCT PANELS, NO THROUGH HOLES
5	(5) - CABLE DUCT PANEL, THROUGH HOLES AT EACH END
6	(6) - TWO CABLE DUCT PANELS, THROUGH HOLES AT EACH END
<b>CO Optional Components</b>	
U	(U) - Option not required
1	(1) - DNP I/O MODULE INSTALLATION & MAINTENANCE GUIDE
2	(2) - CABLE, IP SERVER TO FIRST DNP I/O MODULE
3	(3) - CABLE, IBOX TO FIRST DNP I/O MODULE
4	(4) - CABLE, DNP I/O MODULE TO DNP I/O MODULE
5	(5) - CABLE, LAST DNP I/O MODULE

GE Energy reserves the right to make any changes to the ordering guide without notice

For the most recent version of the order guide, please visit the GE T&D website at:  
[http://www.gepower.com/prod\\_serv/products/substation\\_automation/en/index.htm](http://www.gepower.com/prod_serv/products/substation_automation/en/index.htm)